


SPREADER INSTRUCTION MANUAL

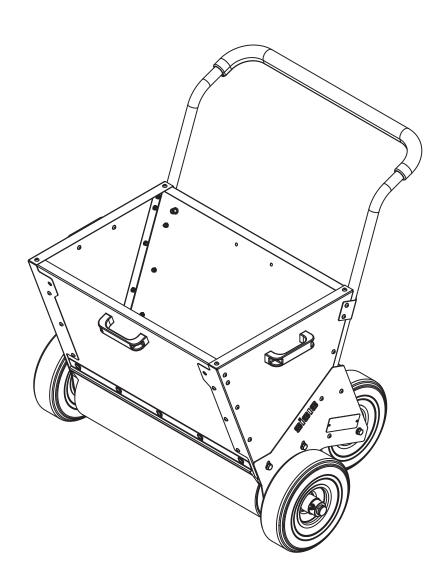

SISIS, Ashbourne Road, Kirk Langley, Derbyshire, DE6 4NJ, England.
Tel: +44 (0) 1332 824 777 | Fax: +44 (0) 1332 824 525 | Email: info@sisis.com | www.sisis.com

Serial Numbers



NOTE

MAKE A NOTE OF THE SERIAL NUMBERS OF YOUR MACHINE & ENGINE AND ALWAYS QUOTE THEM IN ANY COMMUNICATION WITH PERSONNEL AT DENNIS.

MACHINE SERIAL NUMBER

Introduction

The SISIS Spreader is virtually maintenance-free, all parts can be replaced should they become worn.

It is advisable to read the instructions carefully. Proper care and attention will enable the machine to give a continuous, satisfactory, and reliable service.

In the case of any difficulty, or if further information or advice is required, our Service Department is always at your call. In the interests of speed and accuracy of information please quote the serial number of the machine when making enquiries.

For the machine, this is to be found on a plate attached to the side frame. We suggest you write the numbers above.

Contents

| | Page |
|------------------------|------|
| Serial Numbers | 2 |
| Introduction | |
| Operating Instructions | 3 |
| Parts Listings | 4 |
| Notes | 5 |

2

Operating Instructions



PLEASE READ THESE OPERATING INSTRUCTIONS CAREFULLY BEFORE COMMENCING WORK.

We want you to obtain the best performance from this machine. If you have any difficulty in carrying out the following instructions please contact SISIS direct or your local SISIS Territory Manager or SISIS Dealer.

The SISIS Spreader is designed to distribute compost and other similar organic materials, evenly over grassed surfaces. This material is then absorbed into the treated area, feeding the grass and promoting health growth.


OPERATION

The spreader is very simple to operate.

- · Set the adjustable handle to a comfortable height.
- Fill the hopper 3/4 full with the material to be spread.
- When transporting the machine to and from the surface to be treated, tilt the machine onto the rear wheels. This will stop the machine from spreading.
- Use similar technique when turning at the end of a spreading run.

3

SPREADER MAY '12

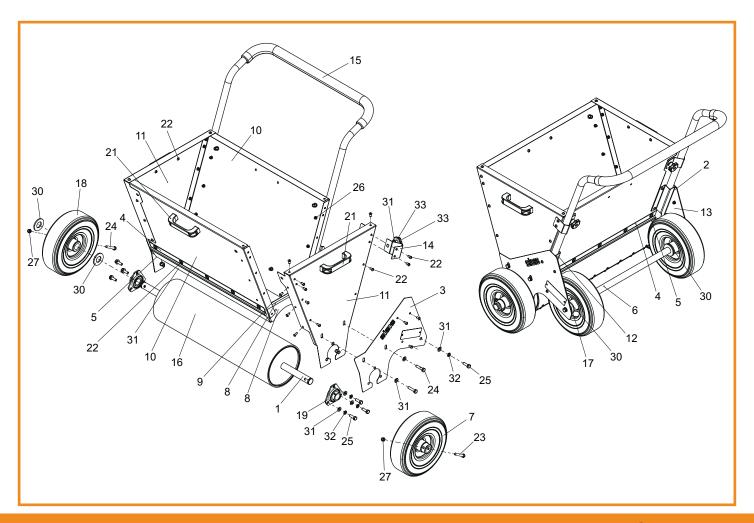

1.01 Spreader

| Item No. | Part No. | Description | Quantity |
|----------|----------|-----------------------------------|------------------|
| 1 | 228024 | 1" Tube Bung | 2 |
| 2 | 270001 | Spreader Side Plate R.H. | 1 |
| 3 | 270002 | Spreader Side Plate L.H. | 1 |
| 4 | 270003 | Brush Retainer | 2 2 |
| 5 | 270004 | Brush Strip | 2 |
| 6 | 270005 | Axle Assembly | 1 |
| 7 | 270007 | Wheel Bush | 1 |
| 8 | 270008 | Seal | 4 |
| 9 | 270009 | Seal Plate | 2 |
| 10 | 270011 | Hopper Side Plate | 2 2 2 |
| 11 | 270012 | Hopper End Plate | 2 |
| 12 | 270014 | Inner Support Plate L.H. | 1 |
| 13 | 270015 | Inner Support Plate R.H. | 1 |
| 14 | 270019 | Handle Bracket | 2 |
| 15 | 270020 | Handle Foam Assy | 1 |
| 16 | 270030 | Roller Assy | 1 |
| 17 | D2131 | End Spacer | 2 |
| 18 | D8733 | Wheel | 2 4 2 1 |
| 19 | F21872 | Bearing | 2 |
| 20 | F36000 | Name Plate Sisis | |
| 21 | J209243 | Handle Grassbox | 3 |
| 22 | SP01016 | Button Head M6 x 12 | 52 |
| 23 | SP01022 | Hex Set Screw M8 x 50 | 1 |
| 24 | SP01036 | Hex Set Screw M8 x 35 | 5 |
| 25 | SP01045 | Hex Set Screw M8 x 25 | 8 |
| 26 | SP02004 | Nut M6 Nyloc | 36 |
| 27 | SP02006 | Nut M8 Nyloc (T) | 6 |
| 28 | SP02042 | Rivnut Hex M6 (0.5-3.0) [No Head] | 10 |
| 29 | SP02044 | Rivnut Hex M8 (0.5-3.0) [No Head] | 10 |
| 30 | SP03001 | Washer ID25.4 Form C | 6 |
| 31 | SP03008 | Washer M8 Form A | 24 |
| 32 | SP03029 | Washer M8 Spring Lock | 10 |
| 33 | SP14009 | Knob Plastic M8 Male | 2 |

SPREADER MAY '12

4

5

SPREADER MAY '12

SISIS, Ashbourne Road, Kirk Langley, Derbyshire, DE6 4NJ, England.
Tel: +44 (0) 1332 824 777 | Fax: +44 (0) 1332 824 525 | Email: info@sisis.com | www.sisis.com